

WORKSTEAD

INSTALLATION INSTRUCTIONS | ORBIT SCONCE - HARDWIRED



GENERAL NOTES

This luminaire is UL, cUL, and CE listed for installation in dry or damp locations.

When installing luminaire, conform to all applicable local electrical codes, ordinances, and the National Electrical Code (NEC).

For your safety and proper operation of luminaire, read and understand all instructions completely before commencing installation of this luminaire.

Carefully unpack the luminaire and inspect for damage.

Use the enclosed gloves when handling the luminaire.

This product is rated for one (1) 60W max E26 G25 bulb (or E27 G80 bulb, depending on your location).

Save these instructions for future reference.

CAUTION


This product should be installed only by a licensed electrician.

WARNING

The electricity must be turned off at the main fuse box before installing this luminaire. Turning power off using the light switch may not be sufficient to prevent electrical shock.

Use UL listed wire nuts for all wiring connections in this luminaire. Wrap wire nut connections with UL listed electrical tape.

INCLUDED COMPONENTS FOR INSTALLATION



(1) luminaire body



(1) mounting plate



(1) reflector



(1) E26/E27 bulb



(4) 1-1/2" #8 x 32 machine screws



(2) acorn nuts



(3) wire nuts



(1) Allen wrench

ASSEMBLY AND MOUNTING INSTRUCTIONS


STEP 1 | CUT POWER

Shut off the main electrical supply to the junction box from the fuse box/circuit breaker. Turning power off at the switch is not sufficient.

STEP 2 | ATTACH MOUNTING PLATE

Locate the junction box in the wall. Install (2) 1-1/2" #8 machine screws provided into the outer holes of the mounting plate provided, from the back side, to act as mounting studs. Attach the mounting plate to the junction box using (2) 1-1/2" #8 x 32 machine screws provided. (Fig. 1)

Fig. 1

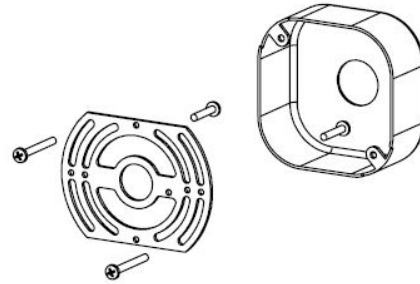

STEP 3 | CONNECT WIRES

Using the wire nuts provided, make electrical connections by following the electrical configuration table. (Fig. 2) Ensure that all electrical connections are wrapped with UL listed electrical tape.


Fig. 2

FROM SUPPLY	TO LUMINAIRE
Connect black or red (hot) house supply circuit wire to:	Luminaire black wire (hot)
Connect white (neutral) house supply circuit wire to:	Luminaire white wire (neutral)
Connect green insulated or bare copper (ground) house supply circuit wire to:	Luminaire bare copper wire (ground)

STEP 4 | SECURE BACKPLATE

Carefully tuck the wiring into the junction box. Carefully align the two holes in the backplate with the mounting stud screws and slip the backplate over those screws. Attach and tighten the two acorn nuts provided to those screws to secure the luminaire to the wall. NOTE: Tighten acorn nuts by hand or using soft-touch pliers. (Fig. 3)

Fig. 3

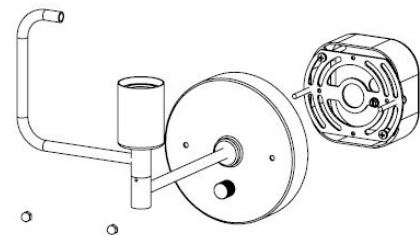

STEP 5 | INSTALL REFLECTOR

Screw the reflector onto the end of the bent arm. Secure the reflector to the arm by tightening the set screw at the reflector's collar using the Allen wrench provided. (See Fig. 4 on page 4)

STEP 6 | INSTALL BULB

Install the bulb provided. Return power to the luminaire. Turn the dimmer dial to confirm proper function. If further work is needed, be sure to turn off power to luminaire before proceeding.

WORKSTEAD

INSTALLATION INSTRUCTIONS | ORBIT SCONCE - HARDWIRED



ASSEMBLY AND MOUNTING INSTRUCTIONS

Fig. 4

