# WORKSTEAD

## INSTALLATION INSTRUCTIONS | LANTERN SCONCE

# WORKSTEAD

## INSTALLATION INSTRUCTIONS | LANTERN SCONCE

### GENERAL NOTES

This luminaire is UL, cUL, and CE listed for installation in dry or damp locations.

When installing luminaire, conform to all applicable local electrical codes, ordinances, and the National Electrical Code (NEC).

For your safety and proper operation of luminaire, read and understand all instructions completely before commencing installation of this luminaire.

Carefully unpack the luminaire and inspect for damage.

Use the enclosed gloves when handling the luminaire.

This product is rated for one (1) 25W max E12 G14 bulbs (or E14 G45 bulbs, depending on your location).

Save these instructions for future reference.

### CAUTION

This product should be installed only by a licensed electrician.

### WARNING

The electricity must be turned off at the main fuse box before installing this luminaire. Turning power off using the light switch may not be sufficient to prevent electrical shock.

Use UL listed wire nuts for all wiring connections in this luminaire. Wrap wire nut connections with UL listed electrical tape.

### INCLUDED COMPONENTS FOR INSTALLATION

| | |
|---|---|
|  | (1) luminaire body with acorn nut |
| | (1) shade |
| | (1) mounting plate |
| | (1) E12/E14 bulb |
| | (1) tassel (if tassel ordered) |
| | (4) 1-1/2” #8 x 32 machine screws |
|  | (2) acorn nuts |
| | (3) wire nuts |

# WORKSTEAD

## INSTALLATION INSTRUCTIONS | LANTERN SCONCE

### ASSEMBLY AND MOUNTING INSTRUCTIONS

**NOTE**
Do not remove the plastic covering the shade until indicated to preserve the fabric.

**STEP 1 | CUT POWER**
Shut off the main electrical supply to the junction box from the fuse box/circuit breaker. Turning power off at the switch is not sufficient.

**STEP 2 | ATTACH MOUNTING PLATE**
Locate the junction box in the wall. Install (2) 1-1/2" #8 machine screws provided into the outer holes of the mounting plate, from the back side, to act as mounting studs. Attach the mounting plate provided to the junction box using (2) 1-1/2" #8 x 32 machine screws provided. *(Fig. 1)*

**STEP 3 | CONNECT WIRES**
Using the wire nuts provided, make electrical connections by following the electrical configuration table. *(Fig. 2)* Ensure that all electrical connections are wrapped with UL listed electrical tape.

**STEP 4 | SECURE BACKPLATE**
Carefully tuck the wiring into the junction box. Carefully align the two holes in the backplate of the luminaire body with the mounting stud screws and slip the backplate over those screws. Attach and tighten the two acorn nuts provided to those screws to secure the luminaire to the wall. NOTE: Tighten acorn nuts by hand or using soft-touch pliers. *(Fig. 3)*

**STEP 5 | INSTALL BULB**
Install the bulb provided. Return power to the luminaire. If further work is needed, be sure to turn off power to luminaire before proceeding.

**STEP 6 | INSTALL TASSEL - SKIP IF NO TASSEL**
Remove the bulb. Route the loop of the tassel over the socket cup and allow the tassel to hang on the socket arm.

**Fig. 1**

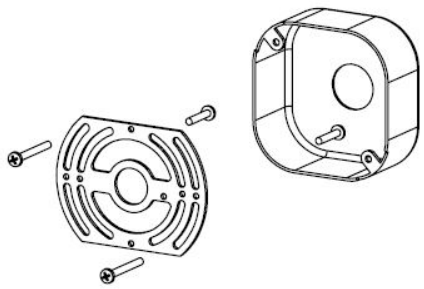

**Fig. 2**

| FROM SUPPLY | TO LUMINAIRE |
|---|---|
| Connect black or red (hot) house supply circuit wire to: | Luminaire black wire (hot) |
| Connect white (neutral) house supply circuit wire to: | Luminaire white wire (neutral) |
| Connect green insulated or bare copper (ground) house supply circuit wire to: | Luminaire bare copper wire (ground) |

**Fig. 3**

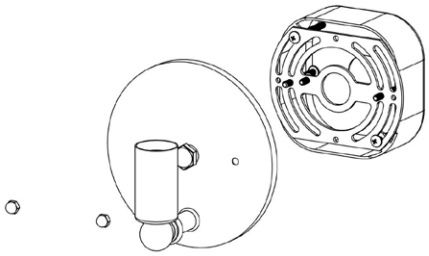

## ASSEMBLY AND MOUNTING INSTRUCTIONS

**STEP 7 | INSTALL SHADE**

Remove the bulb if not removed during tassel installation. Loosen the acorn nut behind the socket cup to expose a few threads between the acorn nut and the bead nut. Remove the plastic covering the shade. Rotate the shade 90° from the final installation orientation. Move the shade to the luminaire body so that the shade mounting attachment is behind the socket cup, and rest the shade mounting attachment between the bead nut and the acorn nut. Rotate the shade so the notch in the shade mounting attachment rests on the space between the acorn nut and the bead nut. Retighten the acorn nut to secure the shade. Reinstall the bulb. *(Fig. 4)*
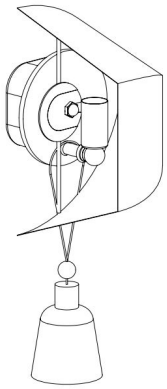
**Fig. 4**