WORKSTEAD

INSTALLATION INSTRUCTIONS | WELL SCONCE

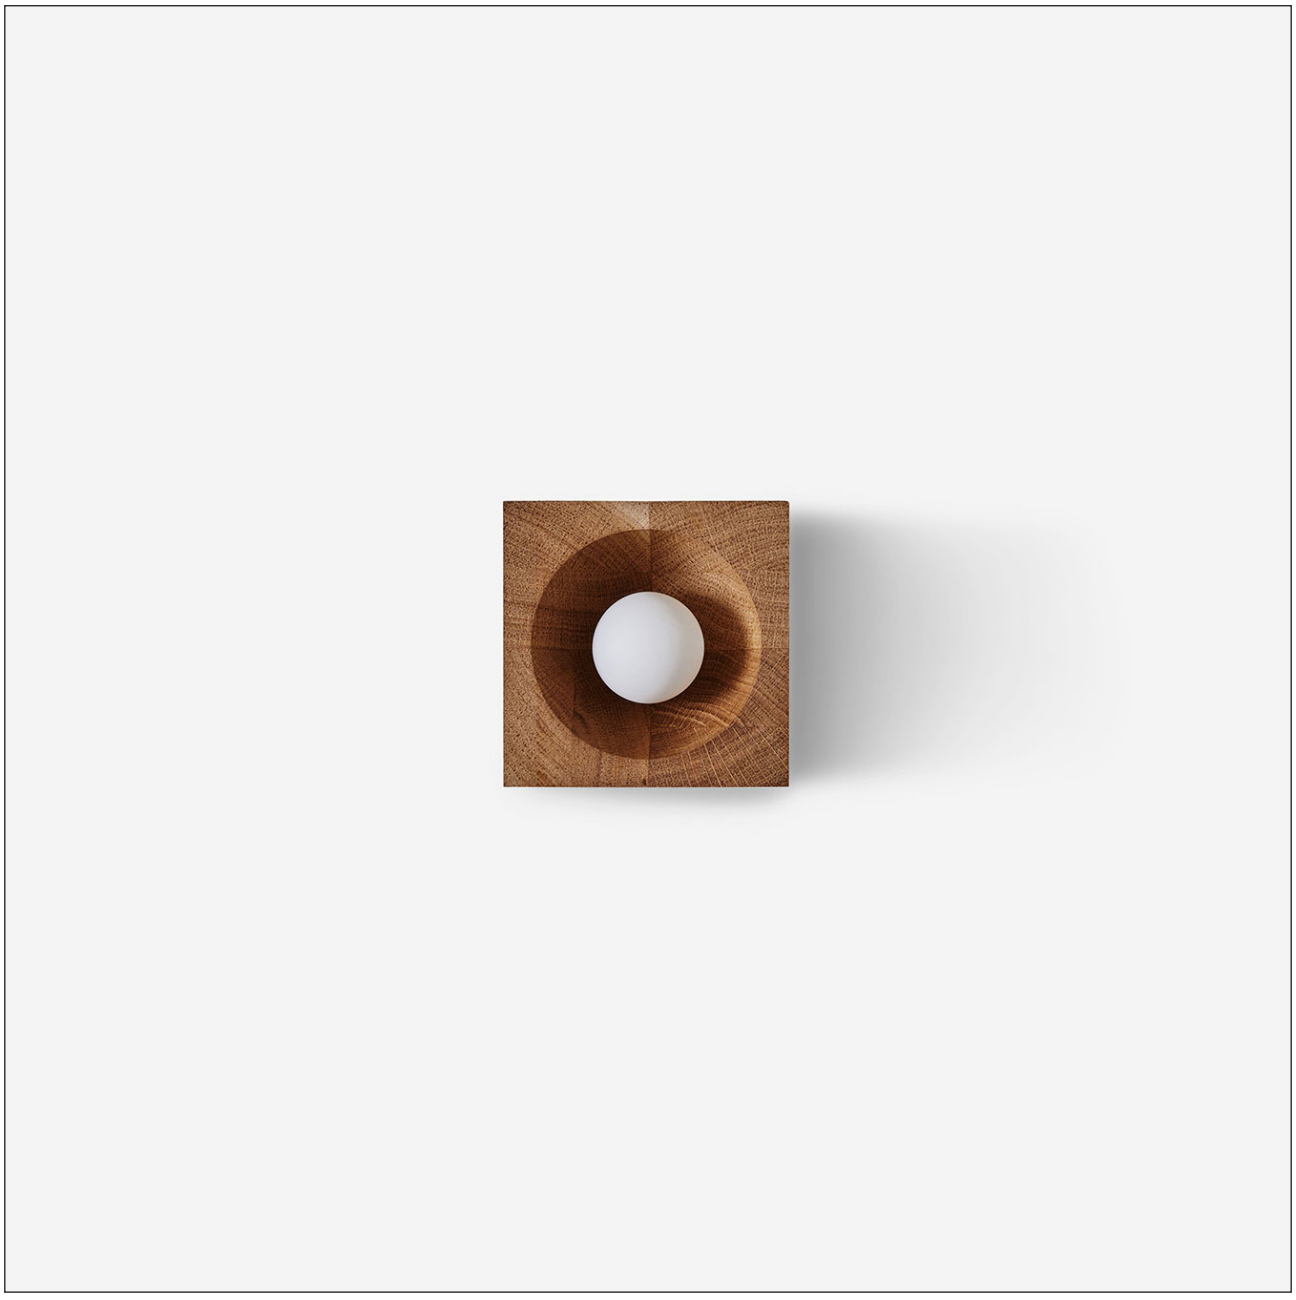

WORKSTEAD

INSTALLATION INSTRUCTIONS | WELL SCONCE

GENERAL NOTES

This luminaire is UL, cUL, and CE listed for installation in dry or damp locations.

When installing luminaire, conform to all applicable local electrical codes, ordinances, and the National Electrical Code (NEC).

For your safety and proper operation of luminaire, read and understand all instructions completely before commencing installation of this luminaire.

Carefully unpack the luminaire and inspect for damage.

Use the enclosed gloves when handling the luminaire.

This product is rated for one (1) 15W max E12 G16 bulb (or E14 G50 bulb, depending on your location).

Save these instructions for future reference.

CAUTION

This product should be installed only by a licensed electrician.

WARNING

The electricity must be turned off at the main fuse box before installing this luminaire. Turning power off using the light switch may not be sufficient to prevent electrical shock.

Use UL listed wire nuts for all wiring connections in this luminaire. Wrap wire nut connections with UL listed electrical tape.

INCLUDED COMPONENTS FOR INSTALLATION

	(1) luminaire body
	(1) mounting plate
	(1) E12/E14 bulb
	(2) 1-1/2” #8 x 32 machine screws
	(2) 3/8” #8 x 32 & (2) 1/2” #8 x 32 set screws
	(3) wire nuts
	(1) Allen wrench

WORKSTEAD

INSTALLATION INSTRUCTIONS | WELL SCONCE

ASSEMBLY AND MOUNTING INSTRUCTIONS

STEP 1 | CUT POWER
Shut off the main electrical supply to the junction box from the fuse box/circuit breaker. Turning power off at the switch is not sufficient.

STEP 2 | CONNECT WIRES
Using the wire nuts provided, make electrical connections by following the electrical configuration table. *(Fig. 1)* Ensure that all electrical connections are wrapped with UL listed electrical tape. Carefully tuck the wiring into the junction box.

Fig. 1

FROM SUPPLY	TO LUMINAIRE
Connect black or red (hot) house supply circuit wire to:	Luminaire black wire (hot)
Connect white (neutral) house supply circuit wire to:	Luminaire white wire (neutral)
Connect green insulated or bare copper (ground) house supply circuit wire to:	Luminaire bare copper wire (ground)

STEP 3 | ATTACH MOUNTING PLATE
Locate the junction box in the wall. Attach the mounting plate provided to the junction box using the 1-1/2” #8 x 32 machine screws provided. *(Fig. 2)*

Fig. 2

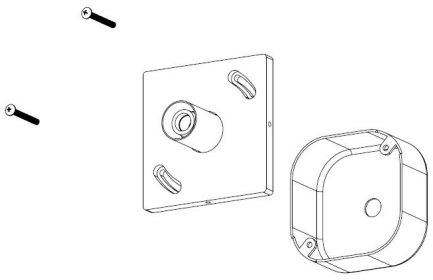

STEP 4 | SECURE LUMINAIRE BODY
NOTE: 1/2" and 3/8" set screws included for mounting. Utilize the screw that works best for j-box site conditions.
Slide the luminaire body over the mounting plate and hold it in place. Using the Allen wrench provided, thread one of the set screws provided into one of the holes in the body until the set screw is flush with the edge of the body. Thread the second set screw provided into the other hole in the body until the set screw is flush with the edge of the body. *(Fig. 3)*
NOTE: THE LUMINAIRE BODY CAN BE INSTALLED WITH THE SET SCREW HOLES ALIGNED EITHER VERTICALLY OR HORIZONTALLY, DEPENDING ON YOUR PREFERENCE.

Fig. 3

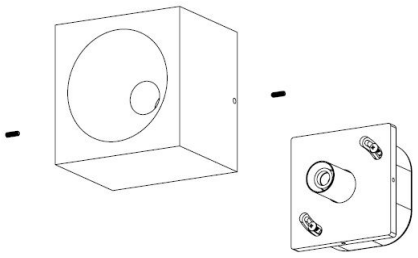

STEP 5 | INSTALL BULB
Install the bulb provided. Return power to the luminaire to confirm proper function. If further work is needed, be sure to turn off power to luminaire before proceeding.